


PUBLIC SERVICE & RETAIL HYGEINE SHIELD

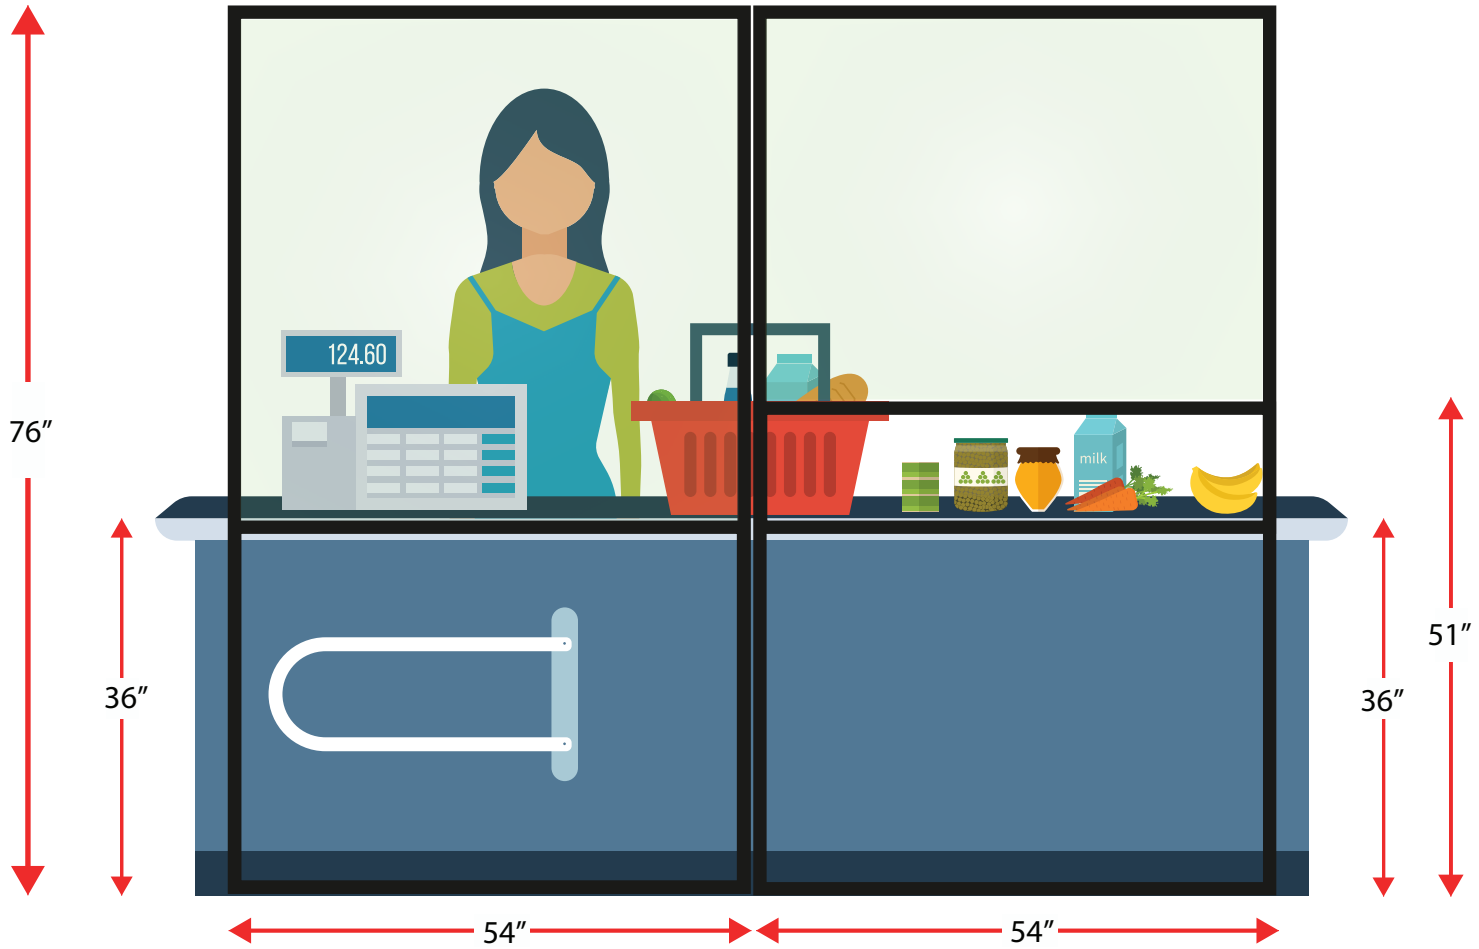


FULL SHIELD MODULE

SHIELD with PASSTHRU




1. Select type with your install location.

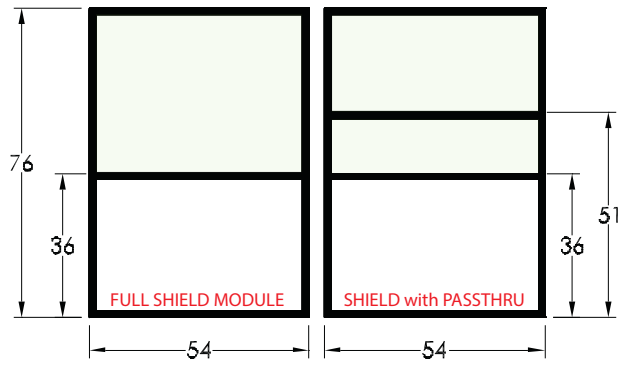

2. Dry fit to determine best placement for coverage.



3. Dry fit base L-bar so shield is vertical. Mark with pencil

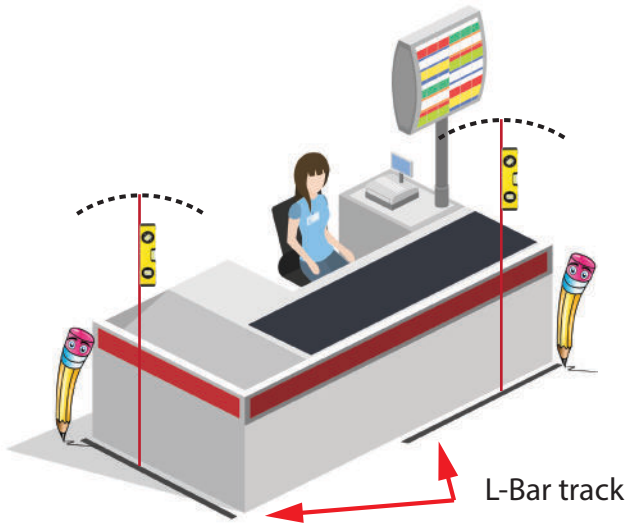


4. Clean the floor to remove residue's or dirt on floor.




5. Remove adhesive tape packing cover on base of L-bar. Locate on pencil line and push down firm.



6. Position Shield. Mark placement of Velcro with pencil. Move shield out of the way. Apply Velcro to mounting surface and to Shield frame.

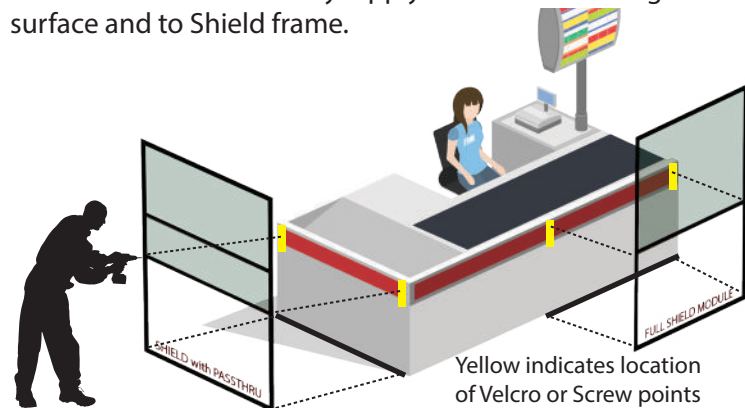

7. Push Shield frame onto Velcro, firmly. (note, supplied long self-taping screws can be used to fasten thru shield frame into a flat surface.

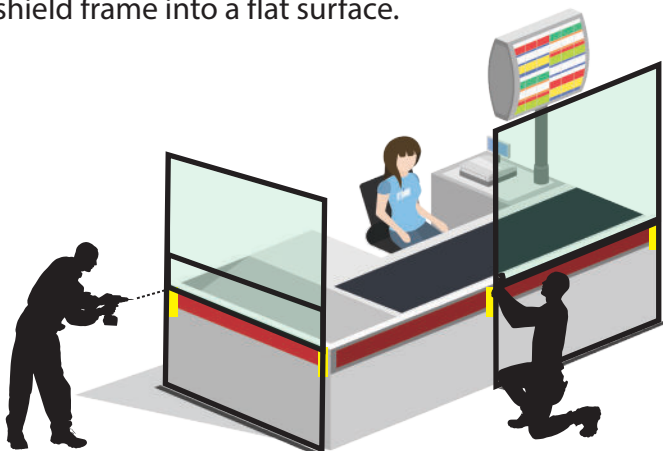

8. Fasten supplied self-taping screws, thru the 4 holes to fasten into the base frame.

